


Vehicle Gateway


INSTALL GUIDE — HEAVY DUTY (J1939)

CBL-VG-BJ1939-YO (Multi-Type J1939 Cable)


What you'll need:

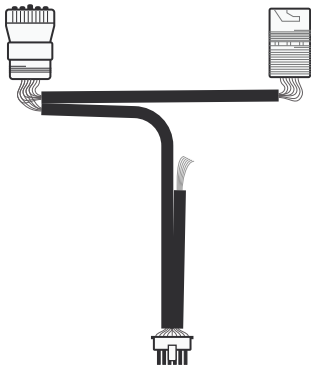


Multi-Type J1939 Cable

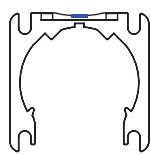

Flange Clip (blue)

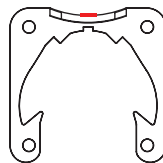

Screw Clip (red)

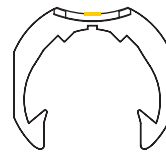

Jam Mount Clip (yellow)




Zip Ties




Vehicle Gateway




Type 2 Indicator Label

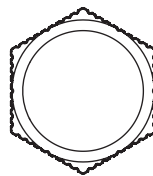


Hexagonal Nut

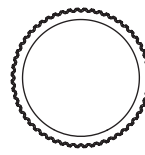


Circular Nut

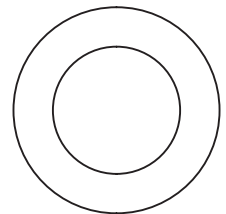


Washer

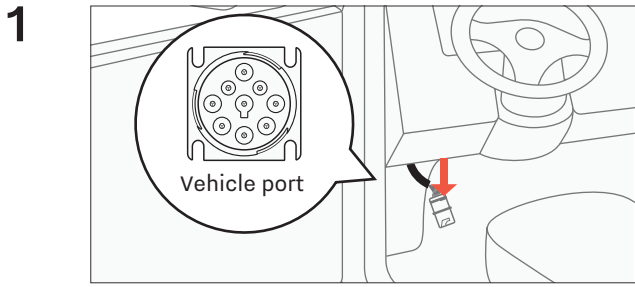


Locate vehicle's diagnostic port and detach it from its original location.

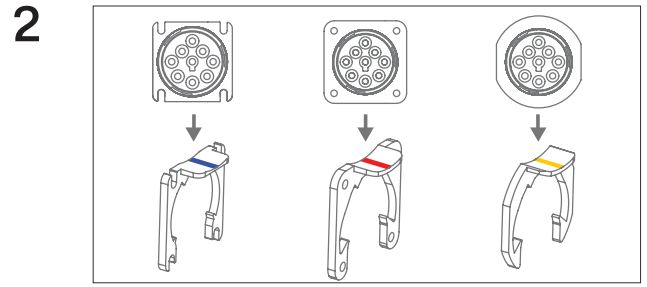

Identify the mounting clip that matches the existing connector.

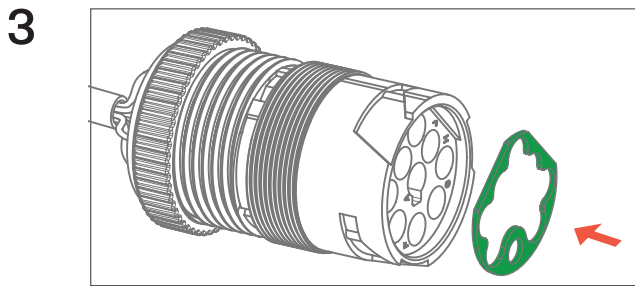


For vehicles with Type 2 (green) connectors: Apply the Type 2 Indicator Label.

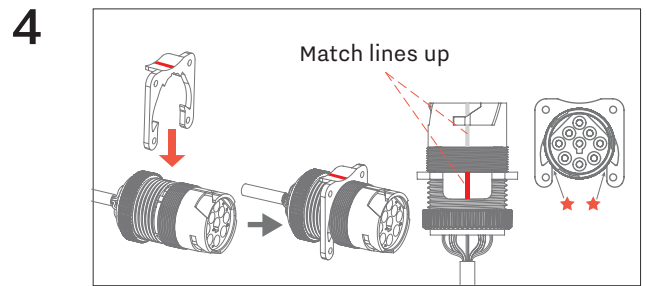


Attach appropriate mounting clip — match up colored line with white line on the connector, and ensure the teeth lock at the 2 ★ locations.


*Note: Clips are reversible and can be used to mount with the Hexagonal Nut (tab facing wires) or with the Circular Nut (tab facing outwards)

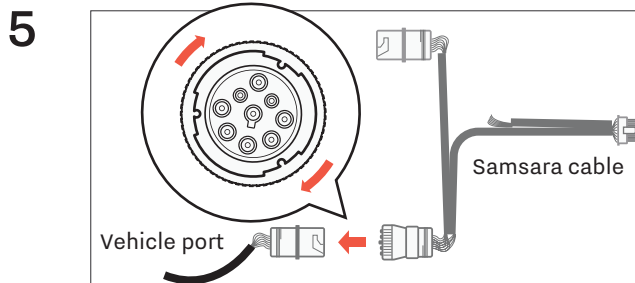


Connect Samsara Cable to vehicle port and twist to lock.

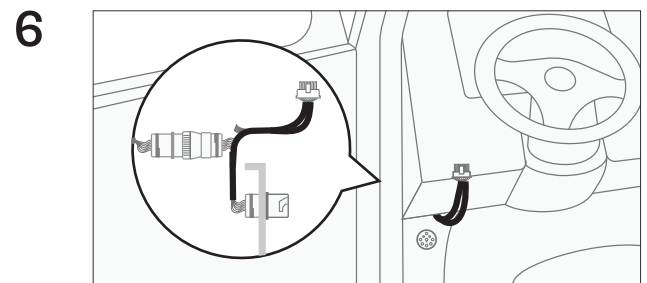

Mount new port to stock location. Use the washer for larger panel cutouts.

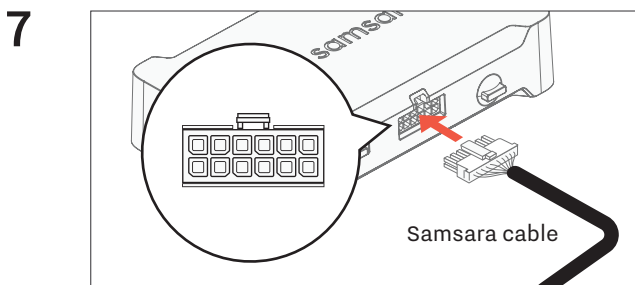

Plug the Samsara Gateway connector into the Gateway. It will click when fully inserted.

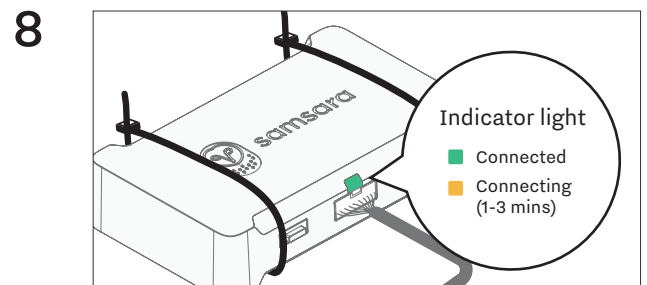

Fasten connected Gateway in a secure position with zip ties. Verify the gateway indicator light turns green.

Activate the device on cloud.samsara.com/activate.