


**IG**Directional Multi-band  
Antenna Installation


## INSTALL GUIDE



Articulation Pole x 1



Articulation Bone x 1




T-form Bracket x 1




W-Bar x 1

Stainless Hose  
Clamp x2**NUT PACK**  
SW5 Plat Washer x 4  
W5 Plat Washer x 4  
M5 Nut x 4**SCREW PACK 1**  
M8x40 Screw Bolts x 1  
W8 Plat Washer x 1  
SW8 Spring Washer x 1  
M8 Nut x 1**SCREW PACK 2**  
M8x40 Screw Bolts x 1  
W8 Plat Washer x 1  
SW8 Spring Washer x 1  
M8 Nut x 1  
M6x60 Screw Bolts x2  
W6 Plat Washer x 2  
SW6 Spring Washer x 2

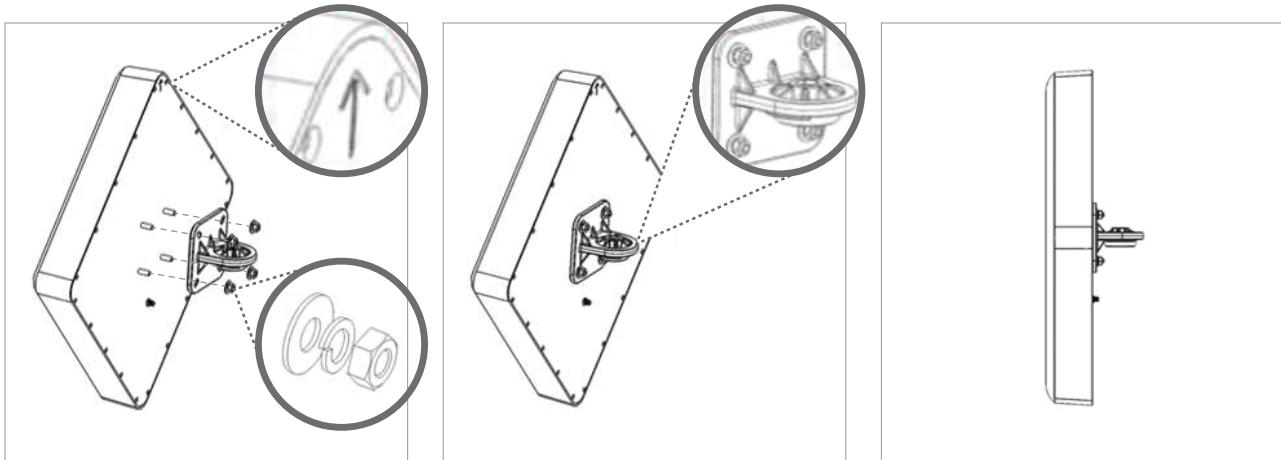**1**

#### Assemble the Articulation Pole onto Antenna

Put the articulation pole to back of antenna plate with M5 Nut, W5 Plat washer and SW5 spring washers (Nut pack).

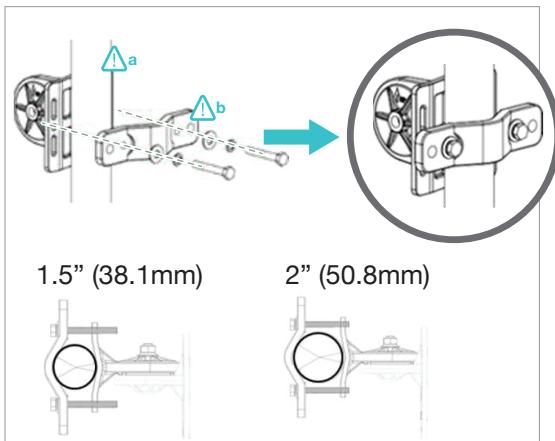**1a**


#### Mount for Pole 1.5~2" (38.1~50.8mm)

Assemble the T-form Bracket and the W-bar to the pole as shown in the above, then use M6x60 bolts, spring washer and washer to fix the mounting kit onto the pole.

**⚠<sup>a</sup> The diameter of the Pole**

Pole diameter Max: 2.1" (53.3mm)  
Min: 1.0" (25.4mm)


**⚠<sup>b</sup> Increase the tighten strength  
parallelly.**

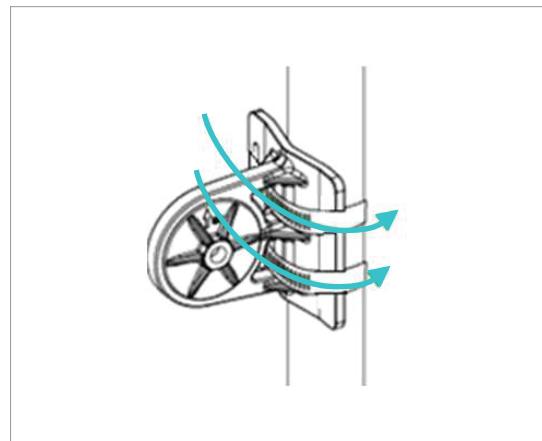**1b**

#### Mount for Pole 1-9/16~2-1/2" (40~63.5mm)

Fix the T-form Bracket to the pole with the stainless hose clamp.


**2**

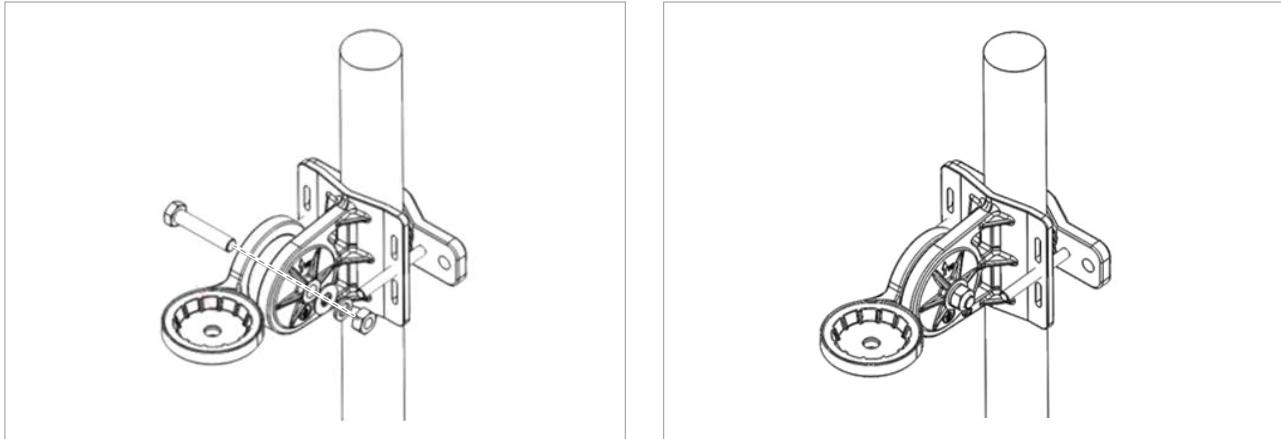

**Assemble Articulation Bone and T-form Bracket**

Fix the Articulation Bone to the T-form Bracket with M8x40 bolts, nut, spring washer and washer.

**3**

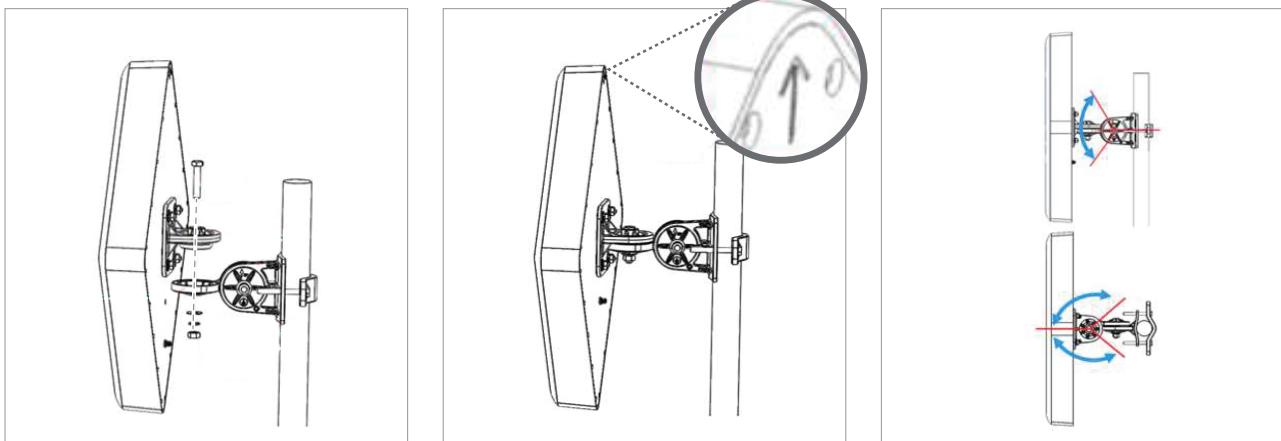

**Install Articulation Pole with the T-form Bracket and Articulation Bone**

Fix the Articulation Pole to the Articulation Bone with M8x40 bolts, nut, spring washer and washer.