



## Vehicle Gateway


**INSTALL GUIDE — HEAVY DUTY (VOLVO/MACK)** 

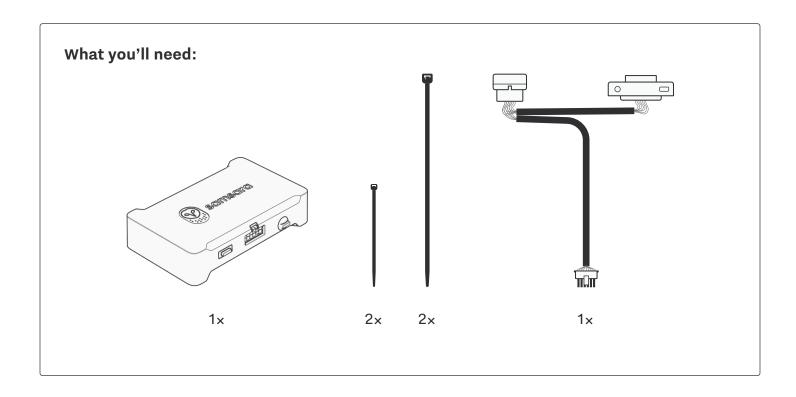


Locate vehicle's diagnostic port and detach it from its original location.

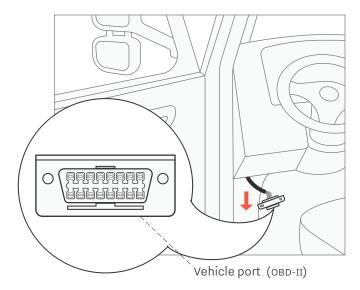


Fasten unconnected diagnostics port to vehicle's original port location.

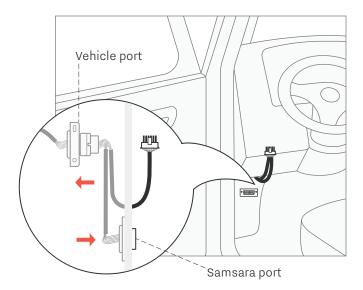


Verify the Gateway indicator light turns green.
This could take 1-3 minutes.

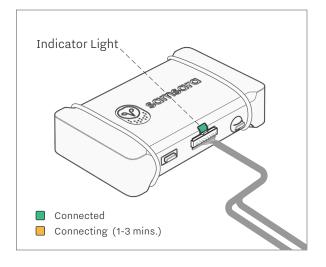

Connect the Samsara Cable. Vehicle's diagnostics remain accessible via the unconnected port.

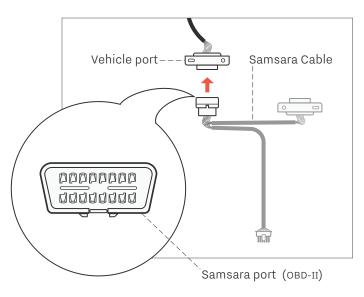

Plug the Samsara Cable gateway connector into the Gateway. It will click when fully inserted.

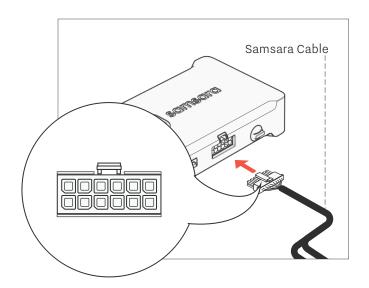

Fasten connected Gateway in a secure position behind the dashboard using zipties.

